


21-6549 0708

Renfert

Magma

The figure consists of a 4x16 grid. The columns are labeled as follows: Column 1 (P), Column 2 (Name), Column 3 (1), Column 4 (2), Column 5 (3), and Column 6 (4). Each row contains four time-based columns: the first two columns are labeled °/min and °C / °F, and the last two columns are labeled Time. The first two columns are repeated in each row. A large, light-gray diagonal watermark with the letter 'X' is overlaid across the entire grid.

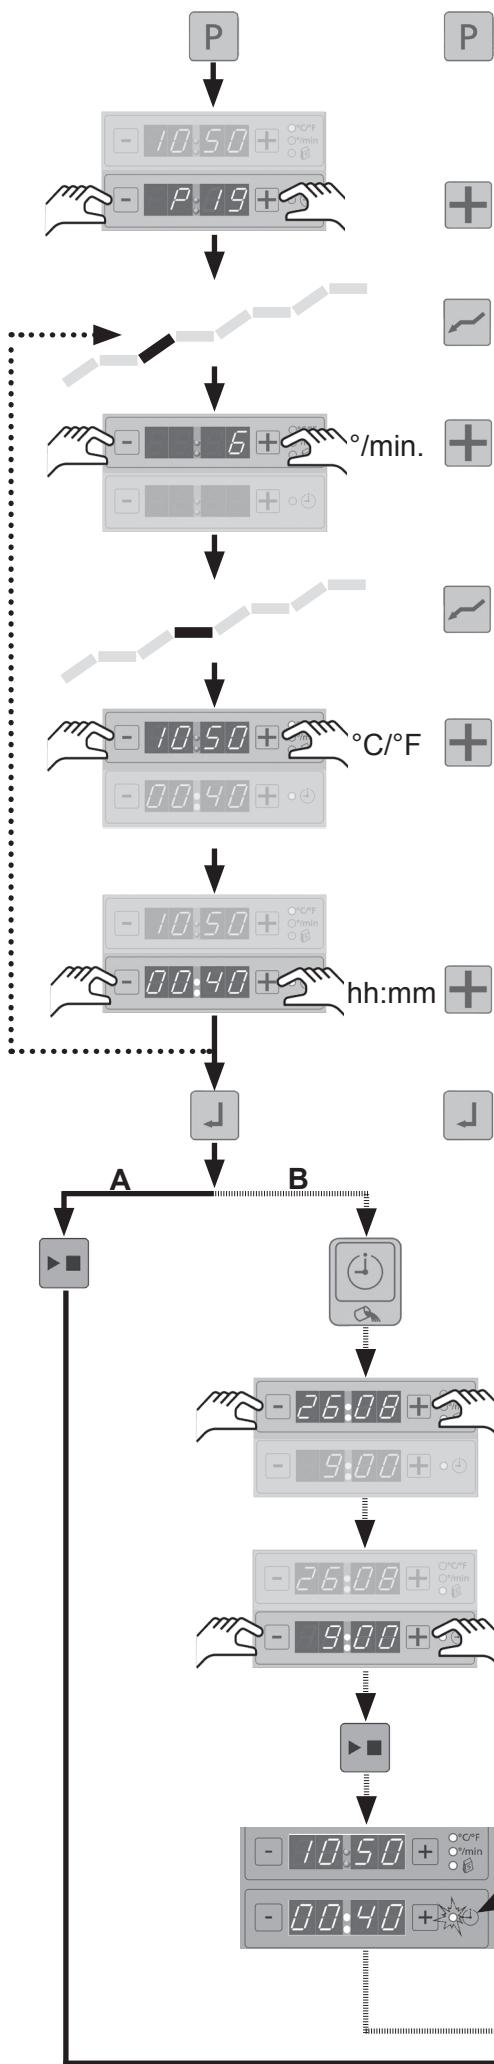

Programm - Taste drücken
press program - key

Programme: appuyer sur la touche
Premere il tasto per la scelta del programma
Нажать клавишу „Программа“

Choisir le programme
Scegliere un programma
Выбор программы

Opter: **phase montante**
Scegliere le **fasi di salita**
Выбор **фазы повышения**

Régler la **vitesse de mise en température**
Impostare la **velocità di riscaldamento**
Установка **температуры**

Opter: **phase de maintien**
Scegliere le **fasi di mantenimento**
Выбор **фазы выдержки**

Régler la **température**
Impostare la **temperatura**
Установка **температуры**

Régler le **temps**
Impostare la **durata**
Установка **времени**

Mémoriser les réglages
Memorizzare le impostazioni
Занесение значений в память

A: Démarrer le programme
B: Programmer le temps de coulée

A: Dare inizio al programma
B: Programmare l'orario della colata

A: Старт программы
B: Программирование момента литья

Régler la date de coulée
Impostare la data della colata
Введение дня литья

Régler de coulée l'heure
Impostare l'orario della colata
Введение времени литья

Démarrer la minuterie
Attivare il timer
Старт таймера

La minuterie est en marche
Il timer è attivato
Таймер включен

Le four chauffe.
Il forno comincia a riscaldare.
Печь нагревается.